




HP LaserJet 1160 or 1320 Laser Assembly Replacement

Written By: jrw01

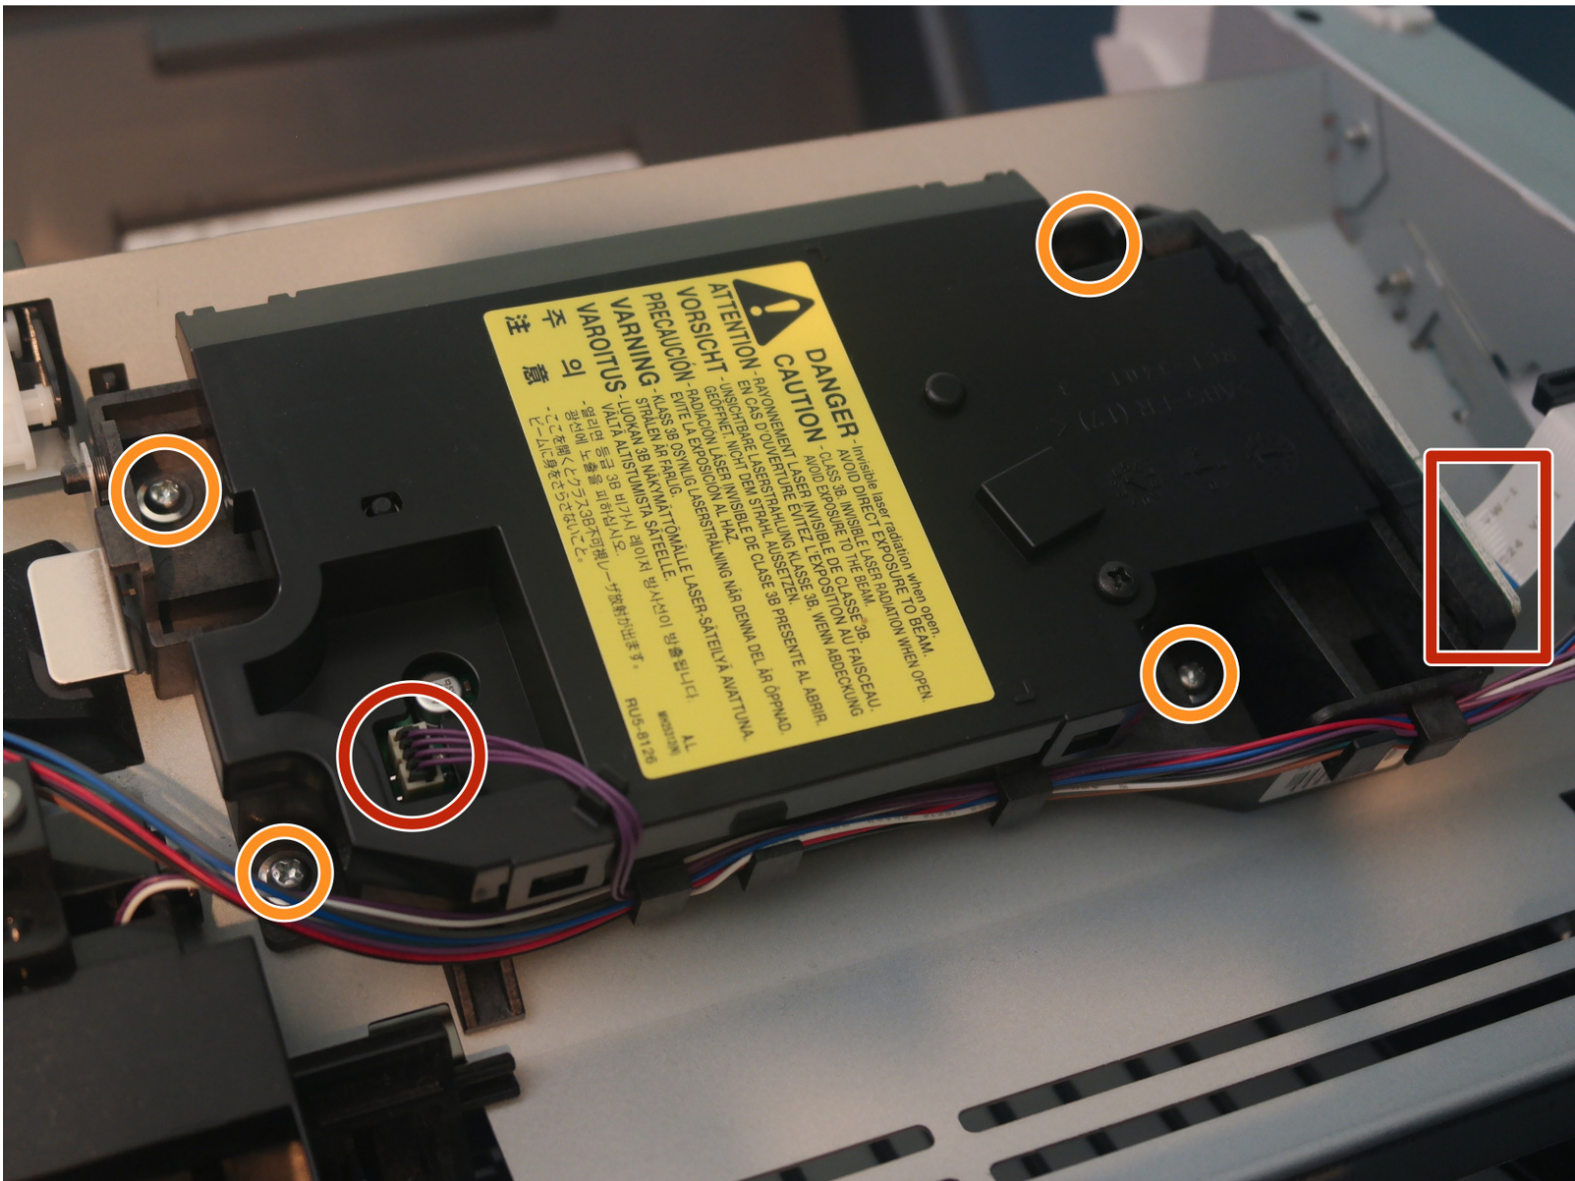



TOOLS:

- [Metal Spudger Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [HP LaserJet 1160 or 1320 Laser Assembly](#) (1)

Step 1 — Left Side Cover




- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

Step 2 — Right Side Cover




- With the printer turned so that the right side is facing upwards, use a metal spudger to disengage 3 tabs holding the right side cover in place.
- Lift the cover off of the printer.

Step 3 — Back Cover

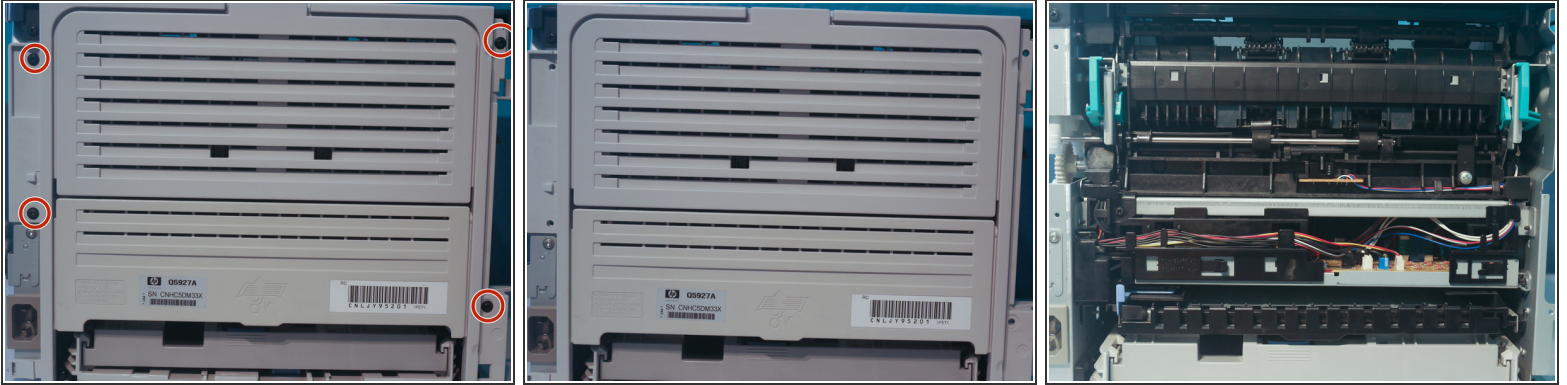


- Remove 4 screws on the back of the printer.
- Remove the back cover.

Step 4 — Top Cover

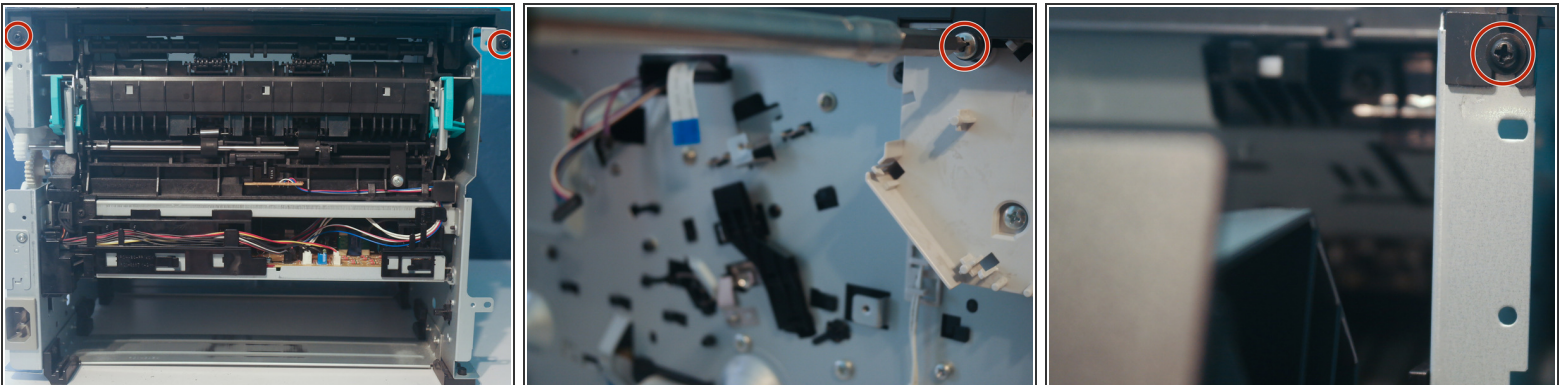



- Remove 2 screws on the back of the printer, one on the left, and one on the front.
- ⓘ The second image shows the formatter removed, but it is not necessary to remove the formatter to replace the top cover.

Step 5 — Top Cover

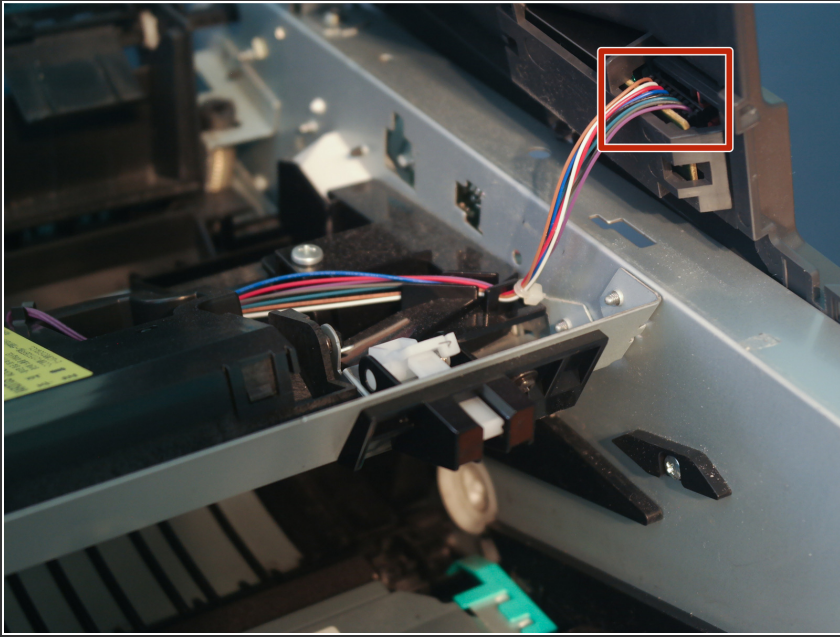

- Disconnect the control panel cable and remove the top cover.

Step 6 — Laser Assembly

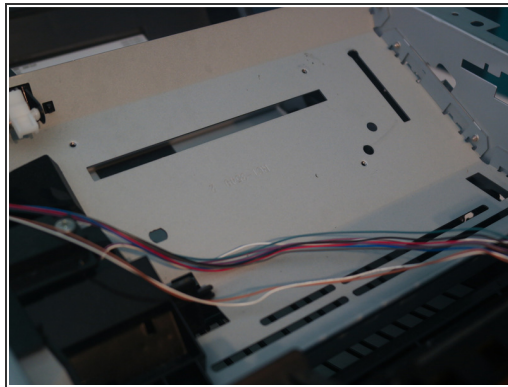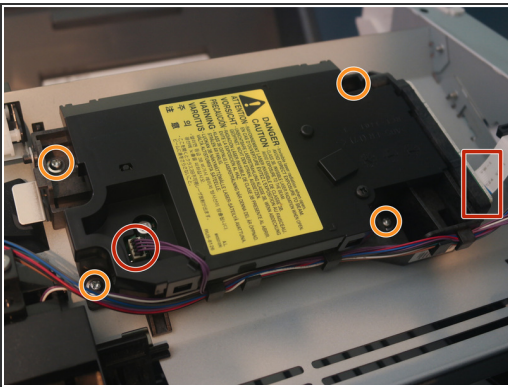

- Remove one cable from the top of the laser assembly and one cable from the right side of the laser assembly.
- Remove 4 screws from the laser assembly.
- Remove all cables from the cable clip on the side of the laser assembly and remove it from the printer.

To reassemble your device, follow these instructions in reverse order.

